

Ruijie Reyee RG-ES, NIS2100 Series Switches 1.0(1)B1P39

Configuration Guide



Document Version: V1.1 Date: 2024.09.10

Copyright © 2024 Ruijie Networks

Copyright

Copyright © 2024 Ruijie Networks

All rights are reserved in this document and this statement.

Any reproduction, excerption, backup, modification, transmission, translation or commercial use of this document or any portion of this document, in any form or by any means, without the prior written consent of Ruijie Networks is prohibited.

Trademarks including , Reyee are owned by Ruijie Networks.

All other trademarks or registered trademarks mentioned in this document are owned by their respective owners.

Disclaimer

The products, services, or features you purchase are subject to commercial contracts and terms. Some or all of the products, services or features described in this document may not be within the scope of your purchase or use. Unless otherwise agreed in the contract, Ruijie Networks does not make any express or implied statement or guarantee for the content of this document.

The names, links, descriptions, screenshots, and any other information regarding third-party software mentioned in this document are provided for your reference only. Ruijie Networks does not explicitly or implicitly endorse or recommend the use of any third-party software and does not make any assurances or guarantees concerning the applicability, security, or legality of such software. You should choose and use third-party software based on your business requirements and obtain proper authorization. Ruijie Networks assumes no liability for any risks or damages arising from your use of third-party software.

Due to product version upgrades or other reasons, the content of this document will be updated from time to time. Ruijie Networks reserves the right to modify the content of the document without any notice or prompt.

This manual is for reference only. Ruijie Networks endeavors to ensure content accuracy and will not shoulder any responsibility for losses and damages caused due to content omissions, inaccuracies or errors.

Preface

Intended Audience

This document is intended for:

- Network engineers
- Technical support and servicing engineers
- Network administrators

Technical Support

- The official website of Ruijie Reyee: https://reyee.ruijie.com
- Technical Support Website: https://reyee.ruijie.com/en-global/support
- Case Portal: https://www.ruijienetworks.com/support/caseportal
- Community: https://community.ruijienetworks.com
- Technical Support Email: service ri@ruijienetworks.com
- Online Robot/Live Chat: https://reyee.ruijie.com/en-global/rita

Conventions

1. GUI Symbols

Interface symbol	Description	Example
Boldface	Button names Window names, tab name, field name and menu items Link	 Click OK. Select Config Wizard. Click the Download File link.
>	Multi-level menus items	Select System > Time.

2. Signs

The signs used in this document are described as follows:



Warning

An alert that calls attention to important rules and information that if not understood or followed can result in data loss or equipment damage.

Caution

An alert that calls attention to essential information that if not understood or followed can result in function failure or performance degradation.

Note

An alert that contains additional or supplementary information that if not understood or followed will not lead to serious consequences.

Specification

An alert that contains a description of product or version support.

3. Note

This manual introduces the product model, port type and GUI for your reference. In case of any discrepancy or inconsistency between the manual and the actual version, the actual version prevails.

Contents

Preface	I
1 Release Note	1
1.1 Hardware Support	1
1.2 Software Feature Changes	1
2 Login	2
2.1 Configuration Environment Requirements	2
2.2 Login to the Web Management System	2
2.2.1 Connecting the Device	2
2.2.2 Login to the Web Management System	2
3 Port Settings	4
3.1 Managing Port Information	4
3.1.1 Port Status Bar	4
3.1.2 Port Info Overview	5
3.1.3 Port Packet Statistics	6
3.2 Setting and Viewing Port Attributes	6
3.2.1 Port Settings	6
3.2.2 Port Status	8
3.3 Port Mirroring	8
3.3.1 Overview	8
3.3.2 Configuration Steps	8
3.4 Port Isolation	9
3.5 Port-based Rate Limiting	10
3.6 Management IP Address	11

3.7 Setting the Port Media Type	12
4 Switch Settings	13
4.1 Managing MAC Address	13
4.1.1 Overview	13
4.1.2 Viewing MAC Address Table	13
4.1.3 Searching for MAC Address	13
4.1.4 Configuring Static MAC Address	14
4.2 VLAN Settings	15
4.2.1 Global VLAN Settings	15
4.2.2 Static VLANs Settings	15
4.2.3 Port VLAN Settings	16
5 Security	18
5.1 DHCP Snooping	18
5.1.1 Overview	18
5.1.2 Configuration Steps	18
5.2 Storm Control	18
5.2.1 Overview	18
5.2.2 Configuration Steps	19
5.3 Loop Guard	19
6 PoE Settings	20
7 ERPS	21
7.1 Overview	21
7.2 Control VLAN and Data VLAN	21
7.3 Basic Model of an Ethernet Ring	22

	7.3.1 Major Ring and Subring	22
	7.3.2 Basic Topologies	22
	7.3.3 Node	23
	7.3.4 Ring Member Port	23
	7.4 RPL and Nodes	24
	7.5 ERPS Packet	25
	7.6 ERPS Timer	25
	7.7 Ring Protection	26
	7.8 Protocols and Standards	26
	7.9 Configuring ERPS	26
	7.10 ERPS Typical Configuration Examples	29
3	Toolkit	34
	8.1 Cloud Settings	34
	8.2 System Logs	35
9	System Settings	35
	9.1 Managing Device Information	35
	9.1.1 Viewing Device Information	35
	9.1.2 Editing the Hostname	36
	9.1.3 Cloud Management	37
	9.2 Password Settings	37
	9.3 Device Reboot	38
	9.4 Setting the Maximum Power of the Power Supply	39
	9.5 System Upgrade	39
	9.5.1 Local Ungrade	39

9.5.2 Online Upgrade	39
9.6 Restoring Factory Configuration	40
10 Monitoring	40
10.1 Cable Test	40
10.2 Multi-DHCP Alarming	41
10.3 Viewing Switch Information	41
11 FAQs	43

Configuration Guide Release Note

1 Release Note

This section describes the hardware support and software feature changes in the 1.0(1)B1P39 version. For details about hardware changes, see the release notes of relevant software versions.

1.1 Hardware Support

The following table lists the hardware models supported by this version.

Table 1-1 Supported Hardware Models

Hardware Type	Model	Hardware Version Number
Switch	RG-ES205GC-P	1.0x, 1.1x, 1.2x, 1.3x, 1.4x, 1.5x, 1.6x,2.0x, 2.1x, 2.2x, 2.3x, 2.4x, 2.5x
Switch	RG-ES209GC-P	1.0x , 1.1x, 1.2x, 1.3x, 1.4x, 1.5x, 1.6x, 1.7x, 1.8x, 1.9x, 1.Ax, 1.Bx, 1.Cx, 1.Dx
Switch	RG-ES205GC	1.0x, 1.1x, 1.2x, 1.3x, 1.4x, 1.5x
Switch	RG-ES208GC	1.0x, 1.1x, 1.2x, 1.3x, 1.4x
Switch	RG-ES210GS-P	1.0x, 1.1x, 1.2x
Switch	RG-ES220GS-P	1.0x, 1.1x, 1.2x
Switch	RG-ES228GS-P	1.0x, 1.1x, 1.2x
Switch	RG-ES206GS-P	1.0x, 1.1x, 1.2x
Switch	RG-ES216GC-V2	1.0x, 1.1x, 1.2x
Switch	RG-ES224GC-V2	1.0x, 1.1x, 1.2x
Switch	RG-NIS2100-8GT2SFP-HP	1.0x
Switch	RG-NIS2100-4GT2SFP-HP	1.0x

1.2 Software Feature Changes

No software features are changed. Only the UI style and menu items of the web UI are optimized.

Configuration Guide Login

2 Login

2.1 Configuration Environment Requirements

 Browser: Google Chrome, Internet Explorer 9.0, 10.0, and 11.0, and some Chromium/IE kernel-based browsers are supported. Exceptions such as messy code and format errors may occur when other browsers are used.

 Resolution: 1024 x 768 or a higher resolution is recommended. Exceptions such as font alignment error and format error may occur when other resolutions are used.

2.2 Login to the Web Management System

2.2.1 Connecting the Device

Connect the switch port with the network port of the PC through an Ethernet cable. Configure the PC with an IP address in the same network segment as the default IP address of the switch so that the PC can ping the switch. For example, set the IP address of the PC to 10.44.77.100.

Table 2-1 Default Configuration

Feature	Default Setting
Device IP Address	10.44.77.200
Password	admin

2.2.2 Login to the Web Management System

(1) Enter the IP address (10.44.77.200 by default) of the device into the address bar of the browser to access the login page.




Note

If the static IP address of the device is changed, or the device dynamically obtains a new IP address, the new IP address can be used to access the web interface of the device as long as the PC and the device are in the same network segment of a LAN.

(2) (Optional) When logging in for the first time, set the login password and click Save.

Configuration Guide Login

Figure 2-1 Web Interface for First Login

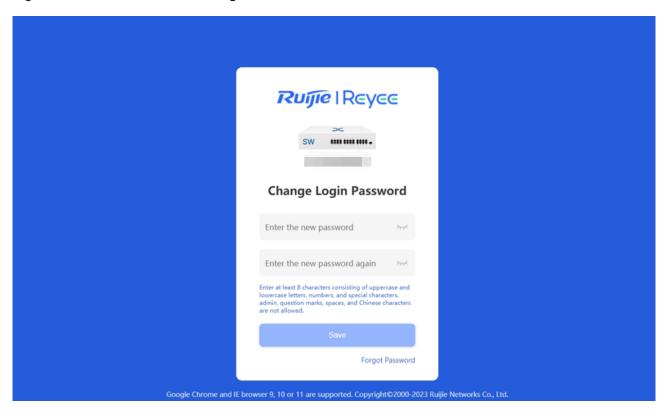


(3) On the web page that is displayed, enter the password and click Log In to enter the home of the web interface.



To change the login password, see <u>9.2 Password Settings</u>.

Figure 2-2 Login Page

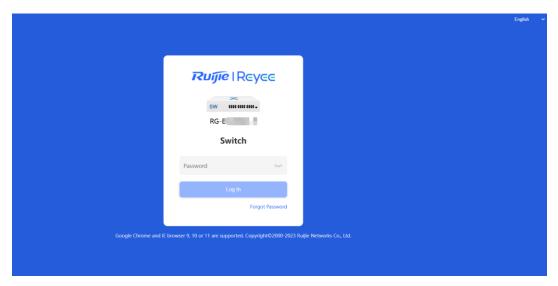

If you forget the device IP address or password, press and hold the **Reset** button on the device panel for more than 5 seconds to restore factory settings. After restoration, you can use the default IP address and password to log in.



Caution

Restoring factory settings will delete the current configurations. Exercise caution when performing this operation.

3 Port Settings

Managing Port Information

3.1.1 Port Status Bar

The port status bar is at the top of the web page, showing port ID, port attribute (uplink/downlink), and the connection status.

Figure 3-1 Port Status Bar



Different colors and shapes of the port icons represent different port statuses. See Table 3-1 for details. Move the cursor over a port icon and the port status will be displayed, including the connection status, port rate, duplex mode, and flow control status.

Table 3-1 **Port Icons**

Port Icon	Description
	The port icon is in the shape of a square, showing the port is a fiber port.
	The port icon is in the shape of an RJ-45 connector, showing the port is a copper port.
Disconnected	The color of the port icon is black, showing the port is disconnected.
3 5 7 Disabled 4 6 8	The color of the port icon is gray, showing the port is disabled and cannot receive or transmit packets.

Port Icon	Description
Loop 1000M / Full Duplex Disabled Flow Control	The color of the port icon is yellow, showing there is a loop.
Connected 1000M / Full Duplex Disabled Flow Control	The color of the port icon is green, showing the port is working normally.
1 3	The number above the port icon is the port ID used to identify the device port. With the port ID, you can specify the target port.
1 2 3 4 5 6 6F Downlink Uplink	 The device port is classified into the uplink port and the downlink port. The uplink port is used to connect network devices in the upper layer and access the core network. The downlink port is used to connect the endpoints.
	 When port isolation is enabled, the downlink ports of the device are isolated from each another, and they can only communicate with the uplink ports. For details, see 3.4 Port Isolation

3.1.2 Port Info Overview

Choose Home.

The **Port Info** pane on the **Home** page displays the global port information, including the port status, port VLAN settings, packet receiving/transmission rate (Rx/Tx rate), port isolation status, loop detection status, and port PoE settings. In addition, it supports searching for the downlink device.

- Click Port Status to configure the basic port attributes. For details, see <u>3.2 Setting and Viewing Port</u>

 Attributes
- Click **VLAN** to set the VLAN of the port. For details, see<u>4.2 VLAN Settings</u>.



Port VLAN settings can only be configured and viewed in the **Port Info** pane after the **VLAN Settings** switch is toggled on.


Figure 3-2 Enabling VLAN Settings



- Click Isolation Status to configure port isolation so that the downlink ports of the device are isolated from each other. For details, see <u>3.4 Port Isolation</u>.
- Click Loop Status to enable loop guard function. After a loop occurs, the port causing the loop will be shut down automatically. For details, see <u>5.3</u> <u>Loop Guard</u>.

- Click **PoE** to view and set PoE parameters of the port. For details, see<u>6 PoE Settings</u>.
- Click Search in the Downlink Device column to search for the downlink device of the selected port. After
 the search is done, click View to view the MAC address of the downlink device.
- Click **Refresh List** to fetch the latest port information.

Figure 3-3 Viewing or Configuring Port Settings

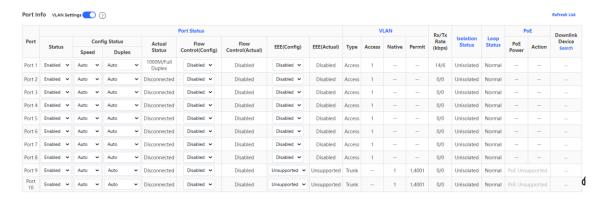

3.1.3 Port Packet Statistics

Choose Monitoring > Port Statistics.

The **Port Statistics** page displays the port status, the connection status, Rx/Tx rate (kbps), Rx/Tx packets (KB), Rx/Tx success, and Rx/Tx failure.

Click Clear to clear current packet statistics of all ports and reset the statistics.

Figure 3-4 Port Packet Statistics

Port	Status	Connection Status	Rx/Tx Rate(kbps)	Rx/Tx Packets(KB)	Rx/Tx Success	Rx/Tx Failure
Port 1	Enabled	Connected	31/218	126708/6759	657071/20802	0/0
Port 2	Enabled	Disconnected	0/0	0/0	0/0	0/0
Port 3	Enabled	Disconnected	0/0	0/0	0/0	0/0
Port 4	Enabled	Disconnected	0/0	0/0	0/0	0/0
Port 5	Enabled	Disconnected	0/0	0/0	0/0	0/0
Port 6	Enabled	Disconnected	0/0	0/0	0/0	0/0
Port 7	Enabled	Disconnected	0/0	0/0	0/0	0/0
Port 8	Enabled	Disconnected	0/0	0/0	0/0	0/0
Port 9	Enabled	Disconnected	0/0	0/0	0/0	0/0
ort 10	Enabled	Disconnected	0/0	0/0	0/0	0/0

3.2 Setting and Viewing Port Attributes

Choose Configuration > Port Settings.

3.2.1 Port Settings

You can set the basic attributes of the Ethernet ports in batches.

- (1) Click **Select** in the Port column to display options of all device ports.
- (2) Select the ports you want to configure, and then select the port status, port rate, port duplex mode, flow control status, and click **Save**.



Note

The EEE function can be configured on ports that meet the following criteria: RJ45 port type, operating at 100/1000 Mbps, with auto-negotiation enabled (rate and duplex mode set to auto).

Figure 3-5 Port Parameter Configuration



Table 3-2 Basic Port Configuration Parameters

Parameter	Description	Default
Port	Select the ports you want to configure.	NA
Status	When the port is disabled, it cannot receive or transmit packets (PoE is not affected).	Enabled
Speed	Configure the operating speed of the Ethernet physical port. When the speed is set to Auto , it means that it is determined by the auto-negotiation between the local port and the peer port. The negotiated speed can be any speed within the port capability.	Auto
Duplex	 Full duplex: The port can receive packets while sending packets. Half duplex: The port can receive or send packets at a time. Auto-negotiation: The duplex mode of the port is determined by the auto-negotiation between the local port and the peer port. 	Auto
Flow Control	After enabling the flow control feature, the port will process the received flow control frames and send flow control frames when flow congestion occurs.	Disabled
EEE	EEE is an IEEE 802.3az standard. When EEE is enabled, the port enters the Lower Power Idle (LPI) mode to save energy when the Ethernet connection is idle.	Disabled



Caution

Shutting down all ports will make the switch unmanageable. Exercise caution when performing this
operation.

For the RG-NIS2100 series, set the port speed to 10 Mbps through the DIP switch on the device's front
panel or through the web interface (On the web interface, set Speed to 10M, Duplex to Auto, and Flow
Control to Enabled.). The latest configuration takes effect.

3.2.2 Port Status

You can view the configuration status of the port attributes and check whether these configurations are active, including the port rate, duplex mode, and flow control status.

Figure 3-6 Port Status

ort List							
Port	Status	Speed/Duplex		Flow Control		EEE	
	Status	Config Status	Actual Status	Config Status	Actual Status	Config Status	Actual Status
Port 1	Enabled	Auto/Auto	1000M/Full Duplex	Disabled	Disabled	Disabled	Disabled
Port 2	Enabled	Auto/Auto	Disconnected	Disabled	Disabled	Disabled	Disabled
Port 3	Enabled	Auto/Auto	Disconnected	Disabled	Disabled	Disabled	Disabled
Port 4	Enabled	Auto/Auto	Disconnected	Disabled	Disabled	Disabled	Disabled
Port 5	Enabled	Auto/Auto	Disconnected	Disabled	Disabled	Disabled	Disabled
Port 6	Enabled	Auto/Auto	Disconnected	Disabled	Disabled	Disabled	Disabled
Port 7	Enabled	Auto/Auto	Disconnected	Disabled	Disabled	Disabled	Disabled
Port 8	Enabled	Auto/Auto	Disconnected	Disabled	Disabled	Disabled	Disabled
Port 9	Enabled	Auto/Auto	Disconnected	Disabled	Disabled	Unsupported	Unsupported
Port 10	Enabled	Auto/Auto	Disconnected	Disabled	Disabled	Unsupported	Unsupported

3.3 Port Mirroring

3.3.1 Overview

In network monitoring and troubleshooting scenarios, users need to analyze data traffic on suspicious network nodes or device ports. When port mirroring is enabled, packets received and transmitted on the source port will be mirrored to the mirror port (destination port). You can monitor and analyze the packets on the mirror port through network analyzer without affecting the normal data forwarding of the monitored device.

As <u>Figure 3-7</u> shows, by configuring port mirroring on Device A, the packets on Port 1 are mirrored to Port 10. Though the network analyzer is not directly connected to Port 1, it can receive all packets on Port 1 and is able to monitor the data traffic on Port 1.

Figure 3-7 Operating Principle of Port Mirroring



3.3.2 Configuration Steps

Choose Configuration > Port Mirroring.

Select the source port, the monitoring direction, and the mirror port, and click **Save**. The device supports configuring one port mirroring rule.

If you want to delete port mirroring configuration, click **Delete**.

Caution

• You can select multiple source ports but only one mirror port. The source ports cannot contain the mirror port.

• Only one port mirroring rule can be configured. If multiple rules are configured, the rule configured last will take effect.

Figure 3-8 Configuring Port Mirroring



Table 3-3 Port Mirroring Parameters

Parameter	Description
Source Port Member	The source port is also called the monitored port. Packets on the source port will be mirrored to the mirror port for network analysis or troubleshooting. You can select multiple source ports. Packets on these ports will be mirrored to one mirror port.
Direction	 Direction of the data traffic monitored on the source port: Bi-directions (input & output): All packets on the source port, including the received packets and the transmitted packets, will be mirrored to the mirror port. Input: The packets received by the source port will be mirrored to the mirror port. Output: The packets transmitted from the sourced port will be mirrored to the mirror port.
Mirror Port	The mirror port is also called the monitoring port. The mirror port is connected with a monitoring device, and it transmits packets on the source port to the monitoring device.

3.4 Port Isolation

Choose Configuration > Port Isolation.

Port isolation is used for isolating layer-2 packets. When port isolation is enabled, the downlink ports are isolated from each other but can communicate with uplink ports.

Port isolation is disabled by default. Toggle the switch to **On** to enable port isolation.

Figure 3-9 Port Isolation

Port Isolation

Downlink ports (1-8) will be isolated. The last 2 ports (9-10) are uplink ports and will not be isolated. (Packets will be forwarded between the uplink port and the downlink port. Downlink ports are not allowed to forward packets to each other).

Status



Caution

- The number of the uplink/downlink ports and port IDs of different devices vary. Please refer to the specific device's documentation for accurate information.
- Port isolation can be enabled on devices featuring DIP switches on the panel. The last configuration applied takes effect.

3.5 Port-based Rate Limiting

Choose QoS > Rate Limiting.

You can configure rate limiting rules for packets in the input direction and the output direction of ports. There is no rate limiting on ports by default.

Select the port you want to configure, then select the rate limiting type and status, and enter the rate limit. Click **Save** to save the configuration. The configuration will be displayed accordingly in the **Port Rate** table right below the **Save** button.

Figure 3-10 Port Rate Limiting

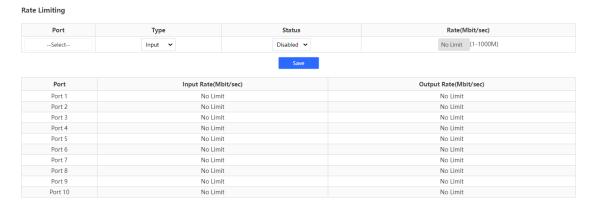


Table 3-4 Rate Limiting Parameters

Parameter	Description	Default
Port	You can select multiple ports for rate limiting configuration in	NA
	batches.	

Parameter	Description	Default
Type	 The direction of the rate-limited data traffic: Input & output: Rate limiting for all packets forwarded over the port, including the received packets and the transmitted packets. Input: Rate limiting for packets received by the port. Output: Rate limiting for packets transmitted from the port. 	NA
Status	You can decide whether to enable or disable rate limiting.	Disabled
Rate (Mbit/sec)	The maximum rate at which packets are forwarded over the port.	No limit



Note

The port rate limit range varies with the switch model.

3.6 Management IP Address

Choose Configuration > IP Settings.

You can configure the management IP address of the device. By accessing the management IP address, you can configure and manage the device.

There are two Internet types available:


- Dynamic IP address: Enable Auto Obtain IP feature to use the IP address assigned dynamically by the uplink DHCP server.
- Static IP address: Disable Auto Obtain IP feature to use the fixed IP address configured manually by the
 user.

Enable **Auto Obtain IP** feature, and the device will automatically obtain various parameters from the DHCP server. You can select whether to obtain a DNS address automatically from the DHCP server. If **Auto Obtain DNS** feature is disabled, you need to configure a DNS address manually.

After disabling **Auto Obtain IP** feature, you need to manually configure the IP address, subnet mask, gateway IP address, and DNS address. Click **Save** to enforce the configuration.

VLAN is used for managing VLAN tag of the management packets. Disable VLAN settings, and the management packets will be untagged, and management VLAN configuration is not supported. The management VLAN of the device is VLAN 1 by default.

Figure 3-11 IP Settings

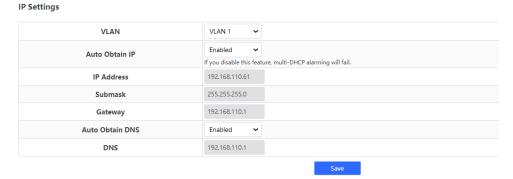



- Disable VLAN settings, and the management packets will be untagged. If you want to tag packets, please enable VLAN settings. For details, see <u>4.2.1 Global VLAN Settings</u>.
- The management VLAN must be selected from the existing VLANs. To create a static VLAN, refer to 4.2.2 Static VLANs Settings.
- You are advised to bind a configured management VLAN to an uplink port. Otherwise, you may fail to
 access the web interface. For details, see <u>4.2.3 Port VLAN Settings</u>.
- If you disable Auto Obtain IP feature, multi-DHCP alarming will fail. For details about multi-DHCP alarming, see 10.2 Multi-DHCP Alarming.

3.7 Setting the Port Media Type



Specification

This function is only supported on the RG-ES206GS-P and the RG-ES210GS-P switches.

Choose Configuration > Port Media Type.

You can set the port media type for a combo port as combo (optical preferred), electrical, or optical.

Figure 3-12 Setting the Port Media Type



Configuration Guide Switch Settings

4 Switch Settings

4.1 Managing MAC Address

4.1.1 Overview

The MAC address table records mappings of MAC addresses and ports to VLANs.

The device queries the MAC address table based on the destination MAC address in a received packet. If the device finds an entry that is consistent with the destination MAC address in the packet, the device forwards the packet through the port specified by the entry in unicast mode. If the device does not find such an entry, it forwards the packet through all ports other than the receiving port in broadcast mode.

MAC address entries are classified into the following types:

- Static MAC address entries: Static MAC address entries are manually configured by the users. Packets
 whose destination MAC address matches the one in such an entry are forwarded through the corresponding
 port.
- Dynamic MAC address entries: Dynamic MAC address entries are learned dynamically by the device. They
 are generated automatically by the device.

4.1.2 Viewing MAC Address Table

Choose Configuration > MAC List.

This page displays the MAC address of the device, including the static MAC address configured manually by the users and the dynamic MAC address learned automatically by the device.

Click **Clear Dynamic MAC** to clear the dynamic MAC address learned by the device. The device will re-learn the MAC address and generate a MAC address table.

Figure 4-1 MAC Address Table





Note

- If you disable VLAN, the device will forward packets according to only the destination MAC address. VLAN ID is not displayed in the MAC address table.
- Up to 100 MAC addresses are displayed.

4.1.3 Searching for MAC Address

Choose Configuration > MAC Search.

You can search for MAC address entries according to MAC address and VLAN ID.

Configuration Guide Switch Settings



Caution

If you disable VLAN, the VLAN ID will not be recorded in the MAC address table.MAC address entries can only be found through MAC address.

Enter MAC address and VLAN ID, and then click Search. The MAC address entries that meet the search criteria will be displayed in table right below the Search button. Moreover, you can enter partial characters of the MAC address for fuzzy search.

Figure 4-2 search for MAC address



4.1.4 Configuring Static MAC Address

Choose Configuration > Static MAC.

By configuring a static MAC address, you can manually bind the MAC address of a downlink network device with a port of the switch. After you add a static MAC address, when the device receives a packet destined to this address from VLAN, it forwards the packet to the specified port.



Caution

If you disable VLAN, the VLAN ID will not be recorded in the MAC address table. It is not allowed to configure a VLAN to which the static MAC address belongs.


Enter a MAC address, specify a VLAN ID and select the outbound port. Then click Add to add a static MAC address. The MAC address entries will be updated accordingly in the MAC address table.

Figure 4-3 Configuring Static MAC Address



If you want to delete a static MAC address, select the MAC address entry you want to delete in the table and click Delete.

Figure 4-4 delete static MAC address

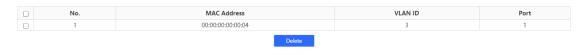

Configuration Guide Switch Settings

4.2 VLAN Settings

4.2.1 Global VLAN Settings


Choose Home.

This page displays the status of VLAN settings. Toggle the on-off switch to enable or disable VLAN settings.

When VLAN is disabled, the device operates like an un-managed switch. The device forwards packets according to the destination MAC address, and the VLAN information of the forwarding packets remains unchanged during the forwarding process.

When VLAN is enabled, the device operates like a managed switch. The device forwards packets according to the destination MAC address and VLAN ID. You can configure the port mode (access or trunk) based on whether a VLAN tag is carried in packets. Besides, all device ports will be initialized to access ports.

Figure 4-5 VLAN Settings

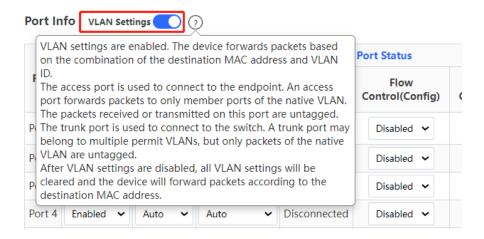

4.2.2 Static VLANs Settings



Caution

Static VLANs can be created only when the global VLAN settings feature is enabled. For details, see <u>4.2.1</u> Global VLAN Settings.

Choose VLAN > VLAN List.

Enter VLAN ID and click Add to create a static VLAN.




Note

- The VLAN ID ranges from 1 to 4094. VLAN 1 is the default VLAN.
- A maximum of 16 VLANs can be created.
- The Management VLAN (VLAN 1), Native VLAN, Permit VLAN, and Access VLAN cannot be deleted.

The VLAN table contains the existing VLANs. Select the VLANs and click **Delete**, and the corresponding VLANs will be deleted. VLAN 1 cannot be deleted.

Configuration Guide Switch Settings

Figure 4-6 Static VLANs Settings

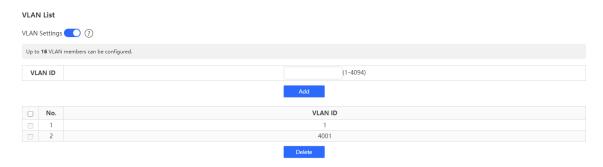

4.2.3 Port VLAN Settings



Caution

You can configure port VLAN only when the VLAN Settings function is enabled. For details, see 4.2.1 Global VLAN Settings.

Choose VLAN > VLAN Settings.

Configure the port mode and VLAN members of a port, and you will know the allowed VLANs of the port and whether the packets forwarded by the port carry tags.



Note

You are advised to create VLAN members (refer to 4.2.2 Static VLANs Settings) before configuring the port based on VLANs. Click VLAN List to access the VLAN List page where you can add VLAN members.

- (1) Select the target ports. Multiple ports can be selected.
- (2) Configure the port type.
 - o Access: If the port is an access port, select Access for the port.
 - Trunk: If the port is a trunk port, select a native VLAN for the port, and enter the VLAN ID range of permit VLANs.
- (3) Click Save.

The configured port information is synchronized to the table on the **VLAN Settings** page.

Configuration Guide Switch Settings

Figure 4-7 Configuring Port VLANs

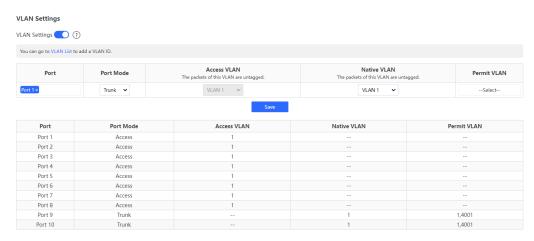


Table 4-1 Port Modes

Port Mode	Description
Access	 One access port can belong to only one VLAN and allow frames from this VLAN only to pass through. This VLAN is called an access VLAN.
	 The frames from the access port do not carry VLAN tag. When the access port receives an untagged frame from a peer device, the local device determines that the frame comes from the access VLAN and adds the access VLAN ID to the frame.
	 Access port is connected to the endpoints.
Trunk	 One trunk port supports one Native VLAN and several Permit VLANs. Native VLAN frames forwarded by a trunk port do not carry tags while Permit VLAN frames forwarded by the trunk port carry tags. Trunk port is connected to switches.
	 You can set the Permit VLAN range to limit VLAN frames that can be forwarded.
	 Make sure the trunk ports at the two ends of the link are configured with the same Native VLAN.



Caution

Improper configuration of VLANs on a port (especially uplink port) may cause failure to log in to the web interface. Exercise caution when configuring VLANs.

Configuration Guide Security

5 Security

5.1 DHCP Snooping

5.1.1 Overview

The Dynamic Host Configuration Protocol (DHCP) snooping function allows a device to snoop DHCP packets exchanged between clients and a server to record and monitor the IP address usage and filter out invalid DHCP packets, including request packets from the clients and response packets from the server.

5.1.2 Configuration Steps

Choose Configuration > DHCP Snooping.


Toggle the switch to **On** to enable DHCP snooping, select the trusted ports, and then click **Save**. When DHCP snooping is enabled, request packets from DHCP clients are forwarded only to the trusted ports. For response packets from DHCP servers, only those from the trusted ports are forwarded.



Caution

The uplink port connected to the DHCP server is configured as the trusted port generally.

Figure 5-1 DHCP Snooping

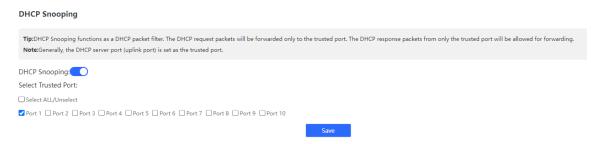

5.2 Storm Control

5.2.1 Overview

When a local area network (LAN) has excess broadcast, multicast, or unknown unicast data flows, the network speed will slow down and packet transmission will have an increased timeout probability. This situation is called a LAN storm, which may be caused by topology protocol execution errors or incorrect network configuration.

You can perform storm control separately for the broadcast, unknown multicast, and unknown unicast data flows. When the rate of broadcast, unknown multicast, or unknown unicast data flows received over a device port exceeds the specified range, the device transmits only packets in the specified range and discards packets beyond the range until the packet rate falls within the range. This prevents flooded data from entering the LAN and causing a storm.

Configuration Guide Security


5.2.2 Configuration Steps

Choose QoS > Storm Control.

Select the storm control type, port, status, and enter the rate limit, and then click Save.

The storm control type and corresponding rate are displayed in the table right below the **Save** button. When storm control is disabled, the rate of broadcast, unknown multicast, and unknown unicast data flows is not limited. The corresponding status is displayed **Disabled**. When storm control is enabled, the corresponding rate limits will be displayed.

Figure 5-2 Storm Control

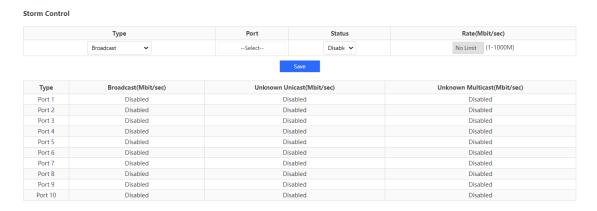

5.3 Loop Guard

Choose Monitoring > Loop Prevention.

When loop guard feature is enabled, the port causing the loop will be shut down automatically. After the loop is removed, the port will be up automatically. Loop guard function is disabled by default.

Figure 5-3 Loop Prevention



6 PoE Settings



Specification

This function is supported by switch models suffixed with -P, -LP, -HP, or -UP in the <u>Supported Hardware Models</u>, such as the RG-ES220GS-P.

Choose PoE.

The device supports PoE power supply. You can view and configure the current power status.

- PoE information: The total power, used power, remaining power, and current work status of the PoE system are displayed.
- PoE watchdog: This feature is mainly applicable to security surveillance scenarios. After this feature is
 enabled, when a PoE port of the device suddenly stops receiving packets during the ping interval, the
 powered device (PD) will be restarted after the ping interval expires to restore normal operation.

Note

- If a non-PD, such as a computer, is connected to a PoE-enabled port of this device, the PoE watchdog
 will not initiate any action on the non-PD even if the trigger condition is met.
- The PoE watchdog ping interval (in seconds) can be set to a value in the range of 90 to 1800.

Figure 6-1 PoE Info




Table 6-1 PoE Watchdog Configuration Description

Packet Receiving Status of the PoE Port	PoE Watchdog is Enabled	Action Taken on the PD
During the ping interval, a PoE port of the device	Yes	The PD is restarted to restore normal operation, and the ping interval is reset.
suddenly stops receiving packets.	No	No action is initiated on the PD.
During the ping interval, a	Yes	No action is initiated on the PD.

Packet Receiving Status of the PoE Port	PoE Watchdog is Enabled	Action Taken on the PD
PoE port of the device still stops receiving packets.	No	No action is initiated on the PD.
During the ping interval, a	Yes	The ping interval is reset.
PoE port of the device starts to receive packets.	No	No action is initiated on the PD.

Port status: The voltage, current, output power, and current power status of the device ports are displayed.
 You can enable or disable PoE function through the on-off toggle switch. When PoE is disabled, the port will not supply power to external devices.

Figure 6-2 Port Status

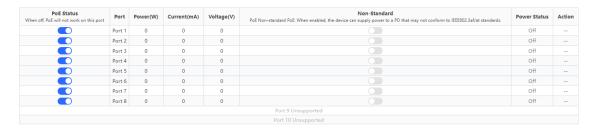

7 ERPS

7.1 Overview

Ethernet Ring Protection Switching (ERPS), also known as G.8032, is a ring protection protocol developed by the International Telecommunication Union (ITU). It is a data link layer protocol specially designed for Ethernet rings. ERPS prevents broadcast storms caused by data loops when an Ethernet ring network is intact, and can rapidly perform link switching and recover the communication between nodes when a link is disconnected in the Ethernet ring, so as to implement data link redundancy.

Currently, the Spanning Tree Protocol (STP) is another solution to the Layer 2 network loop problem. STP is at mature application stage but requires a relatively long (within seconds) convergence time. Compared with STP, ERPS provides faster convergence, with the Layer 2 convergence time less than 50 ms.

7.2 Control VLAN and Data VLAN

ERPS supports two types of virtual local area networks (VLANs): control VLANs and data VLANs.

- Control VLAN: Also known as the Ring Auto Protection Switching VLAN (R-APS VLAN) for transmitting ERPS
 protocol packets. On a device, the ports connecting to an ERPS ring belong to a control VLAN, and only such
 ports can be added to a control VLAN.
- Data VLAN: A data VLAN is used to transmit data packets. Both ERPS ports and non-ERPS ports can be

assigned to a data VLAN. A data VLAN is also known as a protected VLAN.


7.3 Basic Model of an Ethernet Ring

A group of interconnected devices in the same control VLAN (R-APS VLAN) constitute an Ethernet ring (ERPS ring), in which each device is called a node. ERPS rings can be classified into major rings and subrings based on whether a ring is closed.

7.3.1 Major Ring and Subring

- Major ring and major ring link: A major ring is a topology of a closed network connected in a ring, such as the blue rings shown in <u>Figure 7-1</u>. In an ERPS ring, links that belong to and are controlled by a major ring are called major ring links.
- Subring and subring link: A subring is a topology of a non-closed network attached to a major ring, such as
 the green ring shown in <u>Figure 7-1</u>. In an ERPS ring, links that belong to and are controlled by a subring are
 called subring links.
- R-APS virtual channel of a subring: As shown in Figure 7-1, all the links on the major ring can be regarded
 as R-APS virtual channels of subrings, which are used to forward subring protocol packets. They belong to
 the major ring instead of the subring. The major ring must associate with the control VLAN of the subring and
 allow packets from this VLAN to pass through.

Figure 7-1 Basic Topologies of Ethernet Rings

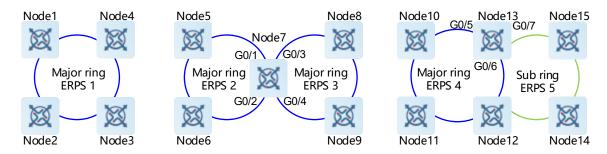

7.3.2 Basic Topologies

Major rings, subrings, and nodes can form basic topologies with different characteristics, depending on the connection modes, as shown in Figure 7-1.

- Single ring: Major ring ERPS 1 (node 1-2-3-4) constitutes a single-ring topology.
- Tangent rings: A topology in which two ERPS rings share one device is called tangent rings. Major ring ERPS
 2 (node 5-6-7) and major ring ERPS 3 (node 7-8-9) constitute a tangent-ring topology, and are tangent to each other on one node, namely, node 7.
- Intersecting rings: A topology in which two ERPS rings share two devices is called intersecting rings. Major ring ERPS 4 (node 13-10-11-12) and subring ERPS 5 (node 13-15-14-12) constitute an intersecting-ring topology, and intersect on two directly connected intersecting nodes, namely, node 13 and node 12.

In practice, a network is a combination of multiple basic topologies, with multiple major rings and multiple subrings.

7.3.3 Node

According to the different topological relationships between nodes and Ethernet rings, nodes are classified into single-ring nodes, tangent nodes, and intersecting nodes by role.

- Single-ring node: In an Ethernet ring, the nodes that belong to only one Ethernet ring (either major ring or subring) are called single-ring nodes. Two interfaces need to be provided on a single-ring node so that the node can be added to one ERPS ring. As shown in <u>Figure 7-1</u>, nodes 1-4 in the single-ring topology, nodes 5, 6, 8, and 9 in the tangent-ring topology, and nodes 10, 11, 14, and 15 in the intersecting-ring topology are all single-ring nodes.
- Tangent node: A device shared in tangent rings is called a tangent node. Four interfaces need to be provided
 on each tangent node, with two added to a major ring and the other two added to another major ring. As
 shown in Figure 7-1, node 7 in the tangent-ring topology is a tangent node.
- Intersecting node: The nodes in intersecting rings that belong to multiple rings are called intersecting nodes. Three interfaces need to be provided on a tangent node, with two added to a major ring and the other added to a subring. As shown in Figure 7-1, nodes 12 and 13 in the intersecting-ring topology are intersecting nodes. ERPS rings can intersect with other multiple ERPS rings and share links to implement data link redundancy. Services can be quickly switched from a failed link in one ERPS ring to a normal link.

7.3.4 Ring Member Port

An Ethernet ring has two ring member ports on each node that it passes through: the **west** and **east** ports. As shown in Figure 7-1:

- If an ERPS ring is a closed major ring, each node that the ring passes through has two interfaces used as the **west** and **east** ports for adding the node to the ERPS ring. For example, on node 7, GigabitEthernet 0/1 and 0/2 are added to the major ring ERPS 2, and GigabitEthernet 0/3 and 0/4 are added to the major ring ERPS 3. On node 13, GigabitEthernet 0/5 and 0/6 are added to the major ring ERPS 4.
- If an ERPS ring is a non-closed subring (in an intersecting-ring topology), a non-intersecting node has two interfaces used as the west and east ports for adding the node to the ERPS subring, such as node 15. On an intersecting node, only one physical port is added to the ERPS subring as a ring member port, and the other ring member port is a virtual channel (indicated by virtual-channel). For example, on node 13, only GigabitEthernet 0/7 is added to the subring ERPS 5.
- There are two states for a port running the ERPS protocol: forwarding and block. Their functions are listed in Table 7-1.

Table 7-1 ERPS Protocol Port States

Port State	Receiving Protocol Packets	Sending Protocol Packets	Address Learning	Receiving Data Packets	Sending Data Packets
Block	Yes	Yes	No	No	No
Forwarding	Yes	Yes	Yes	Yes	Yes

7.4 RPL and Nodes

An Ethernet ring can be in either of the following two states regardless of whether it is a major ring or subring:

- Idle state: The physical links in the entire ring network are connected.
- **Protection** state: A physical link in the ring network is disconnected.


Ring protection link (RPL): When the physical links in a ring network are connected, the ERPS ring is in the idle state, and the links in the logic blocking state are RPLs. Each Ethernet ring has only one RPL. For example, the links indicated by the orange lines shown in <u>Figure 7-2</u> are RPLs, the link between node 3 and node 4 is the RPL of the Ethernet ring ERPS 1 (node 1-2-3-4), and the link between node 5 and node 6 is the RPL of the Ethernet ring ERPS 2 (node 3-5-6).

A node that is adjacent to an RPL and is used to block the RPL to prevent loops when the Ethernet ring is free of faults is called an RPL **owner** node. As shown in <u>Figure 7-2</u>, node 4 is the RPL owner node of the Ethernet ring ERPS 1 (node 1-2-3-4) and node 6 is the RPL owner node of the ERPS 2 (node 3-5-6).

Any nodes other than the RPL owner node in an Ethernet ring are non-RPL owner nodes. As shown in <u>Figure 7-2</u>, nodes except node 4 and node 6 are non-RPL owner nodes of the rings.


Blocked ports on RPLs are RPL ports, and RPL ports do not forward data packets to prevent loops. RPL ports are on RPL owner nodes, and the RPL owner nodes block the RPL ports. Each Ethernet ring has only one RPL owner node.

Figure 7-2 Typical Topology of Tangent Rings

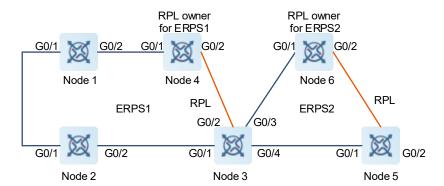

As shown in Figure 7-2, the link between node 3 and node 4 is the RPL of the Ethernet ring ERPS 1. As the RPL owner node of ERPS 1, node 4 blocks the RPL port. The link between node 5 and node 6 is the RPL of the Ethernet ring ERPS 2. As the RPL owner node of ERPS 2, node 6 blocks the RPL port. ERPS 1 (node 1-2-3-4) and ERPS 2 (node 3-5-6) share node 3, forming a tangent-ring topology. Node 3 is the tangent node.

Figure 7-3 Typical Topology of Intersecting Rings

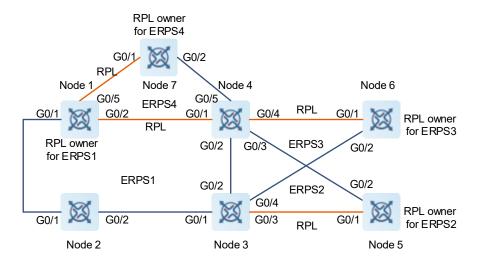

As shown in Figure 7-3, ERPS 1 (node 1-2-3-4) is a major ring, and ERPS 2 (node 3-4-5) is a subring. ERPS 1 and ERPS 2 share node 3 and node 4, forming an intersecting-ring topology. The links between node 4 and node 5, and between node 3 and node 5 are links of the subring ERPS 2 and are controlled by ERPS 2. The link between node 3 and node 4 belongs to the major ring not the subring, and is not controlled by the subring. However, the protocol packets of the subring are transmitted through the direct link between node 3 and node 4. This direct link is the R-APS virtual channel of the subring ERPS 2. Node 2 only belongs to the major ring ERPS 1, and is called a single-ring node. Node 6 only belongs to the subring ERPS 3, and is also called a single-ring node. Node 3 and node 4 are tangent nodes.

7.5 ERPS Packet

ERPS packets (also called R-APS packets) are classified into Signal Fail (SF) packets, No Request (NR) packets, No Requests-RPL Blocked (NR-RB) packets, and Flush packets.

- SF packet: When the link of a node is down, the node sends an SF packet to notify other nodes of its link failure.
- NR packet: When the failed link is restored, the node sends an NR packet to notify the RPL owner node of its link recovery.
- NR-RB packet: When all nodes in an ERPS ring function properly, the RPL owner node sends NR-RB packets periodically.
- Flush packet: In intersecting rings, when a topology change occurs in a subring, the intersecting nodes send
 flush packets to notify other devices in the Ethernet ring to which the subring is connected.

7.6 ERPS Timer

ERPS supports three timers: Holdoff timer, Guard timer, and Wait-To-Restore (WTR) timer.

- Holdoff timer: The timer is used to minimize frequent ERPS topology switching due to intermittent link failures.
 After you configure the Holdoff timer, ERPS performs topology switching only if the link failure still persists after the timer times out.
- Guard timer: The timer is used to prevent a device from receiving expired R-APS PMDU packets. When a

device detects that a link failure is cleared, it sends link recovery packets and starts the **Guard** timer. Before the timer expires, all packets except Flush packets indicating a subring topology change will be discarded.

• WTR timer: The timer is effective only for RPL owner nodes. It is used to avoid ring status misjudgment by the RPL owner node. When an RPL owner node detects that a failure is cleared, it will not perform topology switching immediately but only if the Ethernet ring is recovered after the WTR timer times out. If a ring failure is detected again before the timer expires, the RPL owner node cancels the timer and does not perform topology switching.

7.7 Ring Protection

The ring protection function prevents broadcast storms caused by data loops and can rapidly recover the communication between nodes when a link is disconnected in the Ethernet ring.

Normal state

- o All nodes in the physical topology are connected in ring mode.
- o ERPS blocks the RPL to prevent loops.
- o ERPS detects failures on each link between adjacent nodes.

Link fault

- A node adjacent to a failed node detects the fault.
- o The node adjacent to the failed link blocks the failed link and sends SF packets to notify other nodes in the same ring.
- An SF packet triggers the RPL owner node to enable the RPL port, and also triggers all nodes to update their MAC address entries and ARP/ND entries and enter the protection state.

Link recovery

- o When a failed link is restored, an adjacent node still blocks the link and sends NR packets indicating that no local fault exists.
- When the RPL owner node receives the first NR packet, it starts the WTR timer.
- When the WTR timer times out, the RPL owner node blocks the RPL and sends an NR-RB packet.
- o After receiving this NR-RB packet, other nodes update their MAC address entries and ARP/ND entries, and the node that sends the NR packet stops sending the NR packet and enables the blocked ports.
- The ring network is restored to the normal state.

7.8 Protocols and Standards

ITU-T G.8032/Y.1344: Ethernet ring protection switching

7.9 Configuring ERPS



Specification

- This feature is only supported on the RG-NIS2100 series.
- A maximum of one ERPS ring can be configured in this ERPS version.

Choose ERPS.

(1) As shown in Figure 7-4, after configuring the ERPS ring parameters, click Add to add the ERPS ring.

Note

• The west port and the east port must be trunk ports. For details on how to configure trunk ports, see <u>4.2.3</u> Port VLAN Settings.

- In the permit VLANs of the west port and the east port, the native VLAN cannot be used as a control VLAN.
- ERPS can be enabled or disabled through the DIP switch on the device's front panel or through the web interface. The latest configuration takes effect.
- If ERPS is enabled through the DIP switch on the device's front panel but not the web interface, the
 device will automatically create an ERPS ring with the following default settings: Ring ID 1, Control VLAN
 4001, west port 9 in NORMAL state, east port 10 in NORMAL state, WTR timer set to 5 minutes, Guard
 timer set to 500 milliseconds, Hold timer set to 0 milliseconds, MEL level 7, and revertive mode enabled.
- After enabling ERPS through the web interface, disable ERPS first and then re-enable it using the DIP switch on the front panel. This ensures that the ERPS ring utilizes the configuration performed through the web interface.

Figure 7-4 Adding an ERPS Ring

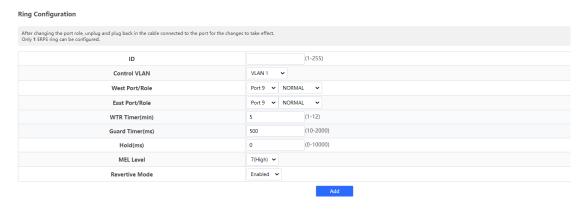


Table 7-2 Parameter Description

Parameter	Description	Default Value
ID	Specifies the ID of an ERPS instance.	N/A
Control VLAN	It is used to forward ERPS protocol packets.	N/A
West Port/Role	 Specifies the west port in the ERPS ring and its role. The values of a port role include: NORMAL: Indicates a normal node. RPL OWNER: Indicates an RPL owner node. RPL NEIGHBOR: Indicates an RPL neighbor node. 	N/A
East Port/Role	Specifies the east port in the ERPS ring and its role. The values of a port role include: NORMAL: Indicates a normal node.	N/A

Parameter	Description	Default Value
	 RPL OWNER: Indicates an RPL owner node. RPL NEIGHBOR: Indicates an RPL neighbor node. 	
WTR Timer	Specifies the interval of the WTR timer.	5 min
Guard Timer	Specifies the interval of the Guard timer.	500 ms
Hold-off Timer	Specifies the interval of the Hold-off timer.	0 ms, indicating a topology switch is performed immediately after a link failure is detected.
MEL Level	Indicates the maintenance entity group (MEG) level. The MEL level of devices in the same ERPS ring must be consistent.	7
Revertive Mode	When this switch is toggled on, once the condition causing a switch has cleared, traffic is blocked on the RPL.	Enabled.

(2) (Optional) As shown in Figure 7-5, select one or more ERPS rings, and click **Delete** to delete the selected ERPS rings.

Figure 7-5 Deleting Selected ERPS Rings



(3) (Optional) As shown in <u>Figure</u>, configure parameters as needed, and click **Confirm** to switch the link of the ERPS ring.

Figure 7-6 Link Switch



Table 7-3 Parameter Description

Parameter	Description	Default Value
ID	Specifies the ID of an ERPS instance.	N/A
Port	Specifies the port in the ERPS ring. The values include West Port and East Port.	N/A

Parameter	Description	Default Value
Link State	Specifies the link state of the selected port. Clear: Clears the forced switch state of the port, and allows the protocol to elect the port to be blocked. Block: Indicates that the port is blocked by a forced switch operation.	N/A

7.10 ERPS Typical Configuration Examples




Note


ERPS ring network-wide configuration is supported only on ReyeeOS version 2.280 or later. Thus, the master device on the network where the ERPS ring will be established must run ReyeeOS 2.280 or later.

Requirements: There are three devices on the user's network that need to form an ERPS ring. The specific topology is shown below.


Figure 7-7 Network Diagram

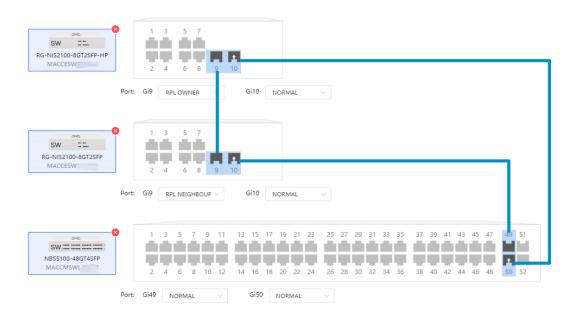


- Note
- To prevent loops, configure ERPS before performing cable connections.
- For an ERPS ring, only one interface can be the RPL Owner, and its peer interface must be the RPL Neighbor.
- (1) Log in to the web interface of the master device.
- (2) Choose Network-Wide > Workspace > Wired > ERPS Ring to access the ERPS Ring configuration page.
- (3) Click +Add on the page to add an ERPS ring.

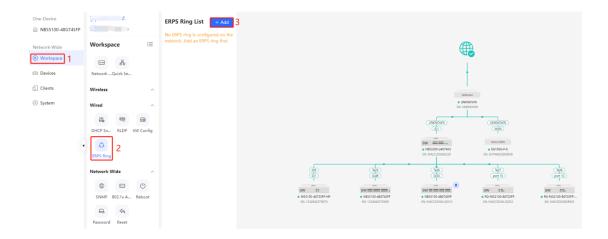


(4) As shown in the following figure, set the ERPS ring parameters (only ID and Control VLAN are mandatory, and should be configured according to the user's network setup. Other parameters can be left at their default values). Then, click Next.

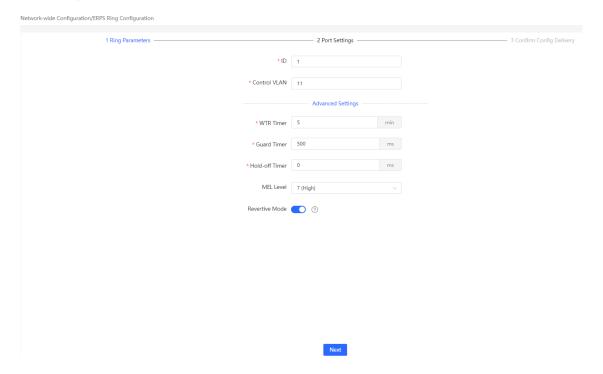

(5) As shown in the following figure, select a device for the ERPS ring, set the Gi9 to **RPL OWNER**, and Gi10 to **NORMAL**. Click **Next**.

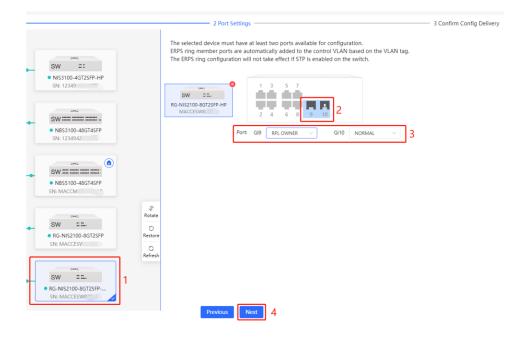


(6) As shown in the following figure, click **Save** to save the configuration.

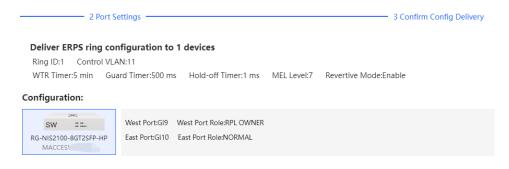





(7) As shown in the following figure, choose **Network-Wide > Workspace > Wired > ERPS Ring**. On the page that opens, click **Edit**.

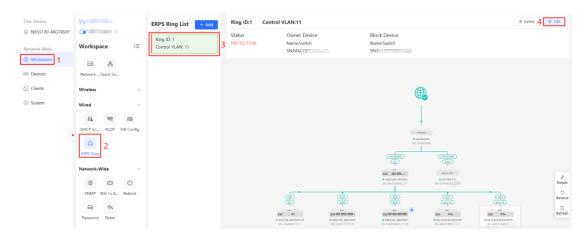


(8) As shown in the following figure, click Next to access the ERPS Ring Configuration page.

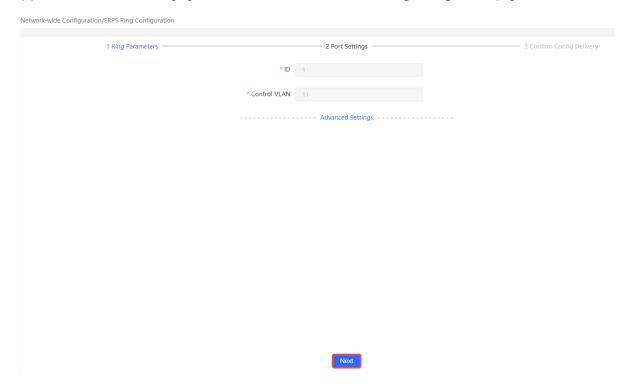

(9) As shown in the following figure, add the remaining devices on the ERPS Ring Configuration page. Select the optical ports on the devices and configure the interfaces connected to the RPL OWNER as RPL NEIGHBOR, following the example of Gi9 in the figure below. Configure other interfaces as NORMAL. After completing the configuration, click Next.

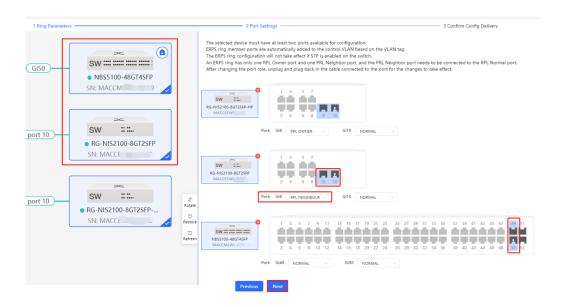


(10) As shown in the following figure, click **Save** to apply all configurations.

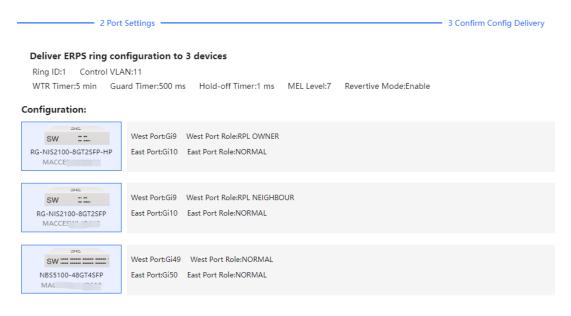



As shown in the figure below, after all cables are connected according to the topology, the devices will automatically form an ERPS ring.

Configuration Guide Toolkit

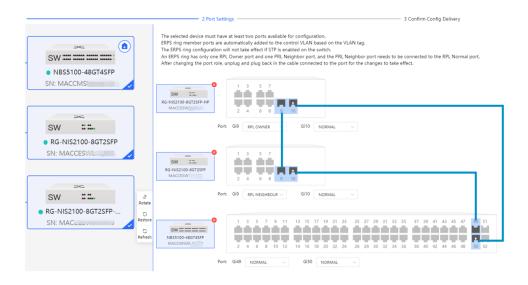

8 Toolkit

8.1 Cloud Settings

Choose Toolkit > Cloud Settings.

On Ruijie Cloud, you can check the status of your device, including its cloud connectivity status, reason for failure to connect, and the domain name and IP address of the cloud server.

- To change the domain name of the device, enter the new domain name in the **Domain** field, and then click Save.
- To restore the default domain name, click **Restore Default**, and then click **OK** on the pop-up window.

Figure 8-1 Cloud Settings



Table 8-1 Cloud Settings Parameters

Parameter	Description
Cloud Status	Indicates the connectivity status of the device on the cloud, including Connected, Unconnected and Connectable.

Configuration Guide System Settings

Parameter	Description	
Reason	 Indicates the reason for connection failure. Reasons for different cloud statuses: Connected: No reason is displayed. Unconnected: No Internet connection or DNS resolution failure. This device failed to connect to Ruijie Cloud. Connectable: This device is not registered to Ruijie Cloud. 	
Domain	Domain name of the cloud server Caution The coap:// prefix is not required in the domain name field as it is added by default. After the domain name is changed, the page is refreshed after 5 seconds by default.	
IP	IP address of the cloud server resolved based on the cloud address.	

8.2 System Logs

Choose Toolkit > Logs.

System logs record device operations, operation time, and operation modules. System logs are used by administrators to monitor the running status of the device, analyze network status, and locate faults.

Figure 8-2 System Logs



Caution

If the issue persists despite following the troubleshooting methods provided in this section, you may require remote support from a technician who will enable developer mode to resolve the issue. We will ensure your data is protected during this process.

System Settings

Managing Device Information

9.1.1 Viewing Device Information

Choose Home.

Configuration Guide System Settings

The **Device Info** pane on the **Home** page displays basic information about the device, including hostname, device model, serial number, firmware version, IP address, MAC address, cloud status, and uptime. You can view more information about the device by choosing **Monitoring > Device Info**.

Figure 9-1 Device Info

Device Info



Figure 9-2 Viewing Device Information

Device Info



Specification

Only the **Home** page of the RG-NIS2100 series displays the DIP switch effective state and the power supply status.

- **DIP Switch Effective State**: You can view the configuration status of ERPS, port isolation, forced 10 Mbps, and power alarm (If the configured function conflicts with the DIP switch settings, the icon will appear next to the function. Hovering over the icon will display a prompt showing the current effective state of the DIP switch.).
- Power Supply Status: You can view the status and the voltage of the power supply.

Figure 9-3 Decoding/Power Status

DIP Switch Effective	State		
ERPS:	Disabled	Port Isolation:	Enabled(!)
10 Mbps (Ports 5-8):	Disabled	Alarm:	Disabled
Power Supply Statu	s(Normal voltage range: 46.0V~57.0V)		
Power1:	Normal	Voltage:	53.4V
Power2:	Normal	Voltage:	52.9V

9.1.2 Editing the Hostname

Choose Home.

Enter the hostname and click Edit to edit the hostname in order to distinguish different devices.

Configuration Guide System Settings

Figure 9-4 Editing the Hostname

Device Info



9.1.3 Cloud Management

Choose Home.

Cloud status displays whether the device is connected to the cloud. After the device is bound to a cloud management account, the Cloud Status will display **Connected**, and you can manage the device remotely through Ruijie Cloud webpage or APP. Click **Connected** to access the homepage of Ruijie Cloud (https://cloud-as.ruijienetworks.com). Click **Download APP** to download Ruijie Cloud APP.

Figure 9-5 Cloud Management

Device Info


Model: RC	Firmware Version	n: ESW_1.0(1)B1P39,Release(11183023
You can manage the device remotely on App. Click here to	S	N: MACCYJX8F
download App.	Uptin	e: 1d 00h 17min 21s
Cloud Status: Connected Download App	Hostnam	e: ruijie Edit

9.2 Password Settings

• Set the login password on the login page.

When logging in to the device for the first time or after resetting it to factory settings, you need to set a new login password on the login page. Click **Save** to apply changes and log in to the device with your new password.

Figure 9-6 Setting the Login Password on the Login Page

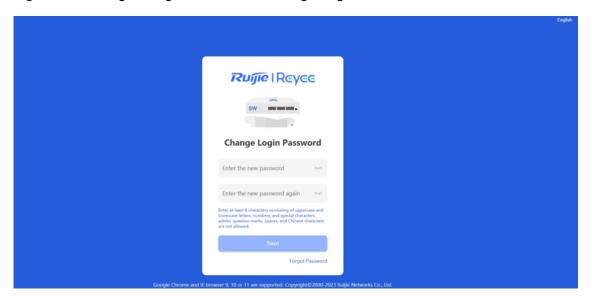

Change the login password after login.

Configuration Guide System Settings

After logging in to the device, choose System > Account Settings. On the Account Settings page, set a new password and click Save. The system will automatically redirect you to the login page, where you can log in using the new password.

Figure 9-7 Changing the Login Password





Caution

This device, when in network-management mode, cannot be configured with an individual management password. You can log in to the primary device to modify the network-wide management password.

Figure 9-8 Network-wide Management Mode





Caution

If this device is managed by Ruijie Cloud or Ruijie Reyee App, you can modify the network-wide management password through Ruijie Cloud or Ruijie Reyee. Changing the management password on the device will not synchronize the changes with Ruijie Cloud or Ruijie Reyee App.

9.3 **Device Reboot**

Choose System > Reboot.

Click Reboot to reboot the switch.

Figure 9-9 Device Reboot



Configuration Guide System Settings

9.4 Setting the Maximum Power of the Power Supply

Choose Configuration > Power Settings.

If the power of the actual power supply differs significantly from the default power of the switch, adjust the power settings on the **Power Settings** page in a timely manner to avoid misoperation or unnecessary power consumption.



Specification

- The power value should approximate the actual output power of the power supply.
- This feature is only supported on the RG-NIS2100 series.

Figure 9-10 Setting the Maximum Power



9.5 System Upgrade


9.5.1 Local Upgrade

Choose System > Upgrade.

Click **Select File** to select the upgrade package from the local files (the upgrade package is a bin file. If it is a tar.gz file, you need to decompress the package and select the bin file for upgrade).

Keep Old Config is selected by default. That means the current configuration will be saved after device upgrade. If there is a huge difference between the current version and the upgrade version, you are advised not to select **Keep Old Config**.

Figure 9-11 Local Upgrade

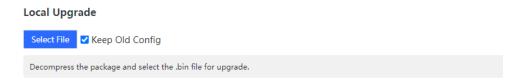

9.5.2 Online Upgrade

Choose System > Upgrade.

When there is a new version in the cloud, the version number of the latest version will be displayed on this page, and the **Upgrade** button will become available. The device will download the installation package of the recommended version from the cloud and it will be updated to the latest version. Online upgrade will keep the old configuration by default.

Configuration Guide Monitoring

Figure 9-12 Online Upgrade

Online Upgrade





Note

The time that online upgrade takes depends on the current network speed. It may take some time. Please be patient.

9.6 Restoring Factory Configuration

Choose **System > Reset**.

Click Reset to restore factory configuration and reboot the device.

Figure 9-13 Restoring Factory Configuration



10 Monitoring

10.1 Cable Test



Note

This feature is not supported on an SFP port.

Choose Monitoring > Cable Test.

Cable Test allows you to check the status of Ethernet cables. For example, you can check whether the cables are short-circuited or disconnected.

Select the ports you want to detect, and then click **Start** to start cable diagnostics. The test result will be displayed accordingly. Click **Start All** to perform one-click cable diagnostics on all ports.

Configuration Guide Monitoring

Figure 10-1 Cable Test



Port	Test Result	Details	
Port 1	Normal	The cable works well.	
Port 2	Disconnected	Please check cable connection or replace the cable.	
Port 3	Disconnected	Please check cable connection or replace the cable.	
Port 4	Disconnected	Please check cable connection or replace the cable.	
Port 5	Disconnected	Please check cable connection or replace the cable.	
Port 6	Disconnected	Please check cable connection or replace the cable.	
Port 7	Disconnected	Please check cable connection or replace the cable.	
Port 8	Disconnected	Please check cable connection or replace the cable.	
Port 9	Unsupported	The port does not support cable diagnostics.	
Port 10	Unsupported	The port does not support cable diagnostics.	



Caution

If you select an uplink port for diagnostics, the network may be intermittenly disconnected. Exercise caution when performing this operation.

10.2 Multi-DHCP Alarming



Caution

Multi-DHCP alarming will fail when the device IP address is not obtained dynamically. For relevant IP address configuration, see <u>3.6 Management IP Address</u>.

Choose Home.

When there are multiple DHCP servers in a LAN, the system will send a conflicting alarm. An alarming message will be displayed in the **Device Info** column.

Figure 10-2 Multi-DHCP Alarming



Move the cursor to to view the alarm details, including the VLAN where the conflicts occur, port, IP address of DHCP server, and MAC address.

10.3 Viewing Switch Information

Choose Monitoring > Device List.


If the switch is under uniform management, some features cannot be configured independently (such as password settings). To facilitate configuration, information of the master device in the VLAN will be displayed in this page. Click the **IP Address** of the master device to access **Master Device** page for global configuration.

The device is able to automatically discover other switches in the same management VLAN. Information of these switches will be displayed in **Switch List**.

Configuration Guide Monitoring

The first row of **Switch List** displays information of the current device, and the following rows display information of other devices. Click **IP Address** of a device to access the web interface of the device (login required).

Figure 10-3 Viewing Switches on the Network

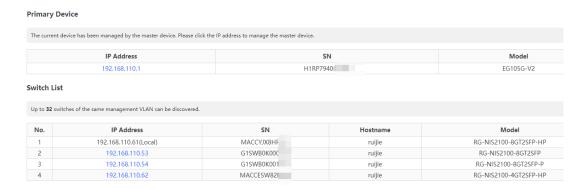



Note

The number of switches that can be discovered varies with product models.

Configuration Guide **FAQs**

FAQs

Q1: I failed to log into the web interface. What can I do?

(1) Verify that the Ethernet cable is properly connected to the LAN port of the device and the LED indicator blinks or is steady on.

- (2) Before accessing the web interface, you are advised to configure the PC with a static IP address in the same network segment as the device IP address (default device IP address: 10.44.77.200 and subnet mask: 255.255.255.0). For example, set the IP address of the PC to 10.44.77.100 and the subnet mask to 255.255.255.0.
- (3) Run the ping command to test the connectivity between the PC and the device.
- (4) If the login failure persists, restore the device to factory settings.

Q2: What can I do if I forget my password? How to restore the factory settings?



Caution

Press and hold the Reset button on the device panel for more than 5 seconds. This action will restore the device to factory settings, clearing all configurations. Exercise caution when performing this operation.

If you forget the password and cannot log in to the device, follow these steps:

- (1) With the device powered on, press and hold the Reset button on the device panel for more than 5 seconds. Release the button when the system LED blinks to restore the device to factory settings.
- (2) Once the device restarts, log in using the default management IP address (10.44.77.200).
- (3) On the login page, set a new password and use it to log in to the device.